




# Sony Clie PEG-NR70 Audio Module Replacement

This guide will show you how to disassemble the device in order to install a new audio module.

Written By: Daniel Soski

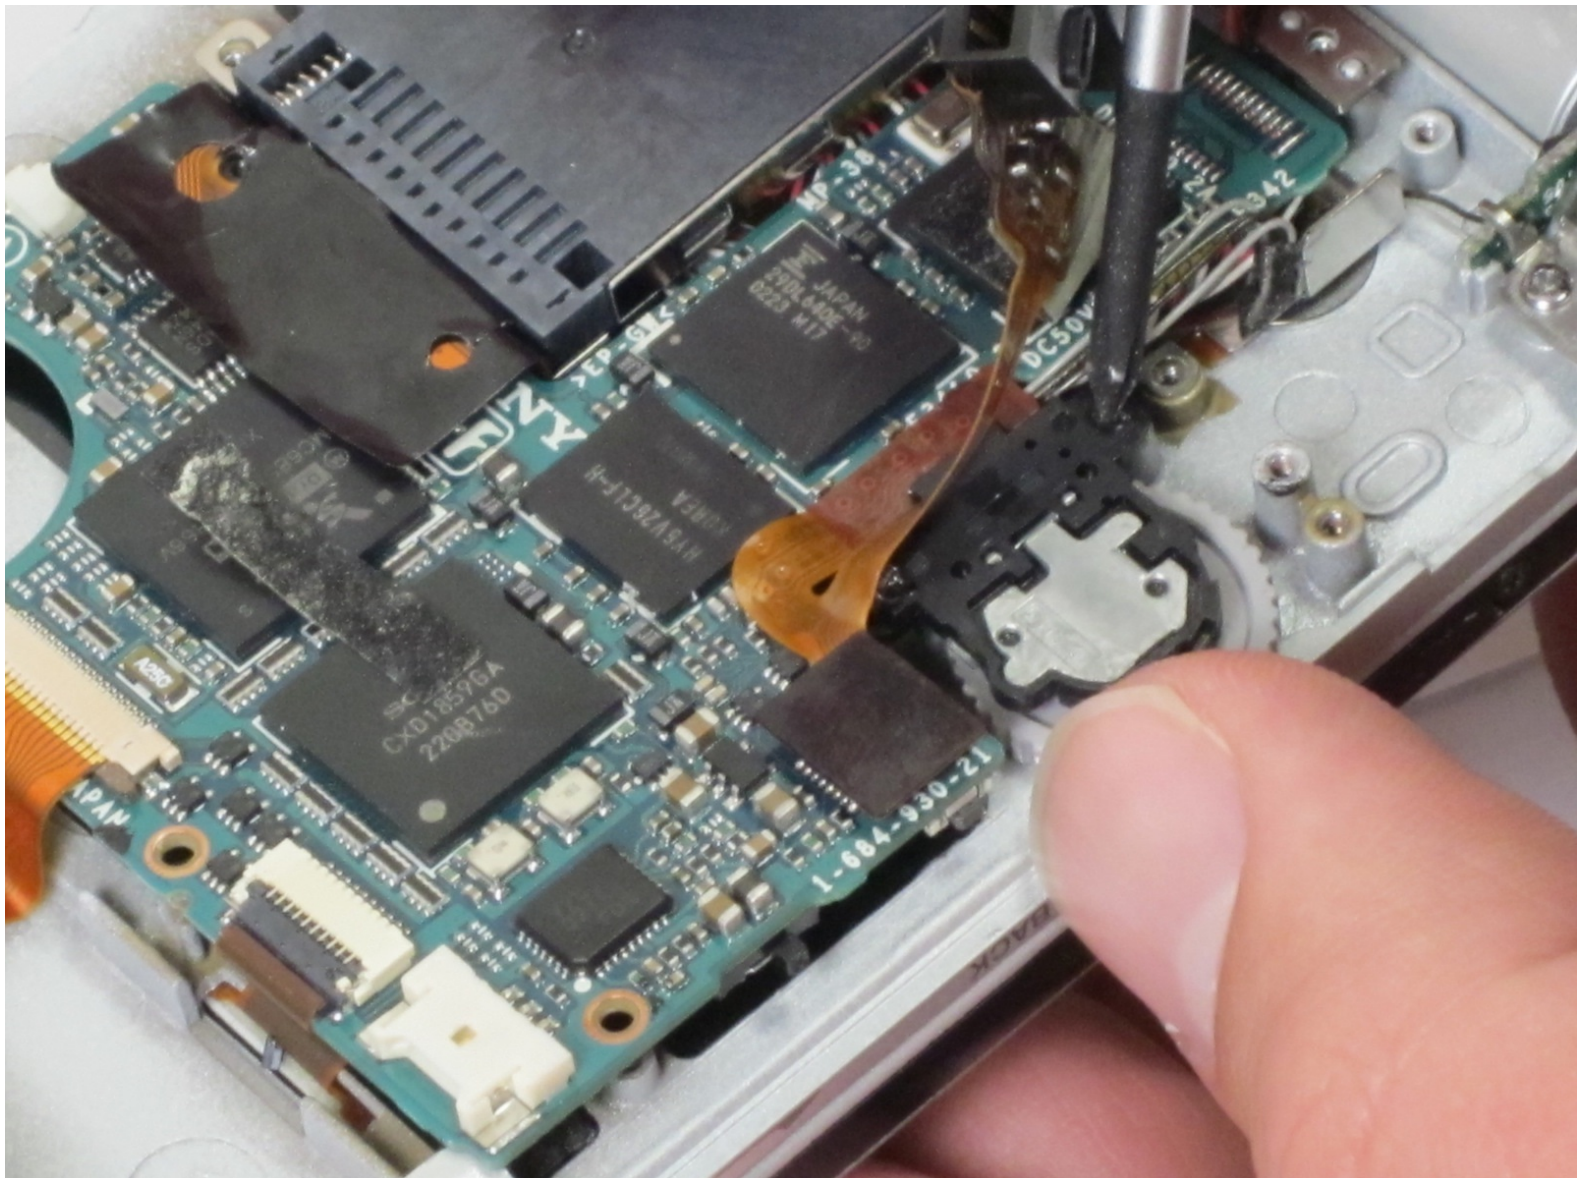

## INTRODUCTION

If the audio in your device is not working, you may need to replace the audio module. This easy step-by-step guide will walk you through the necessary steps to do so.

---



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — The Case



- Unscrew the 1.9mm screw located at the top of the device with a Phillips #00 screwdriver.
- ⓘ It may be helpful to set up a piece of paper to keep track of where removed screws came from.


## Step 2



- Unscrew the 2.5mm screw located on the left side of the device with a Phillips #00 screwdriver.




## Step 3

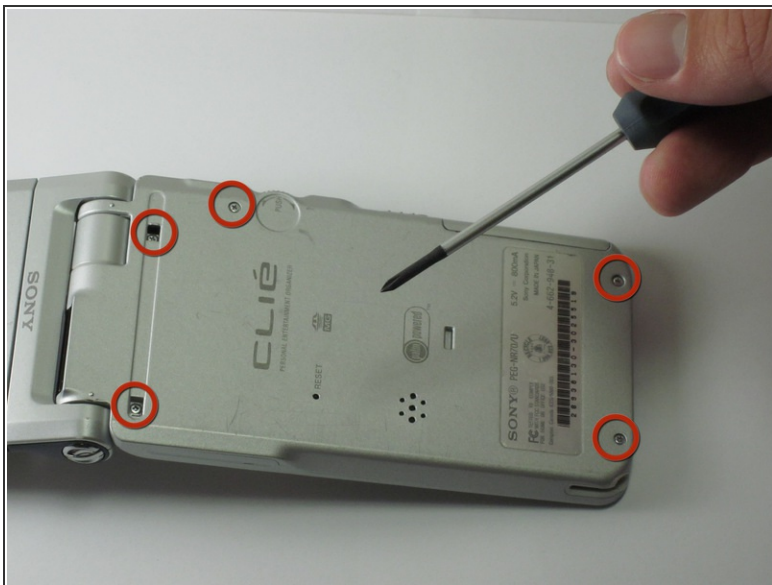


- Unscrew the five 2.5mm screws on the back panel with a Phillips #00 screwdriver.
- Remove the back panel by lifting it away with your hands.

## Step 4 — Audio Module

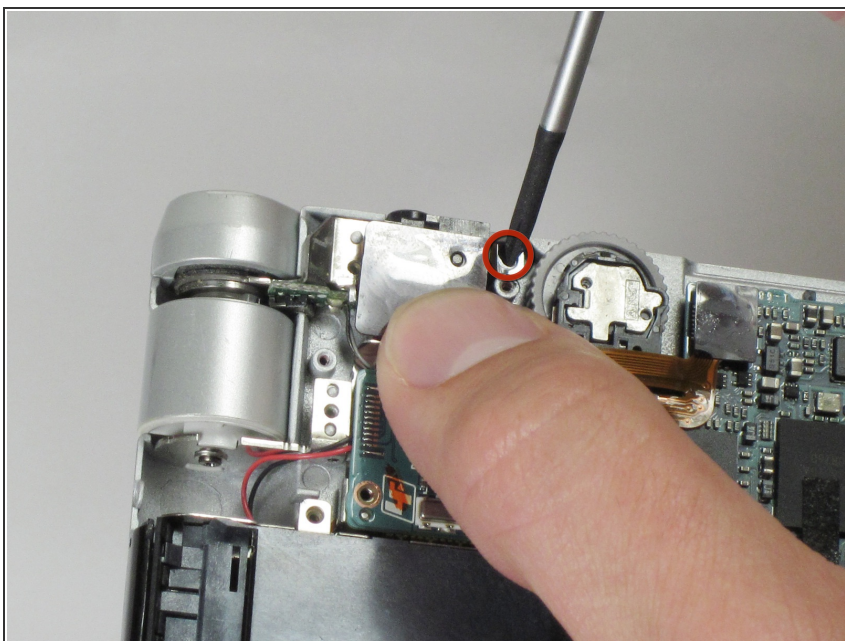


- Unscrew the 2.5mm screw on the top portion of the audio module with a Phillips #00 screwdriver.

## Step 5

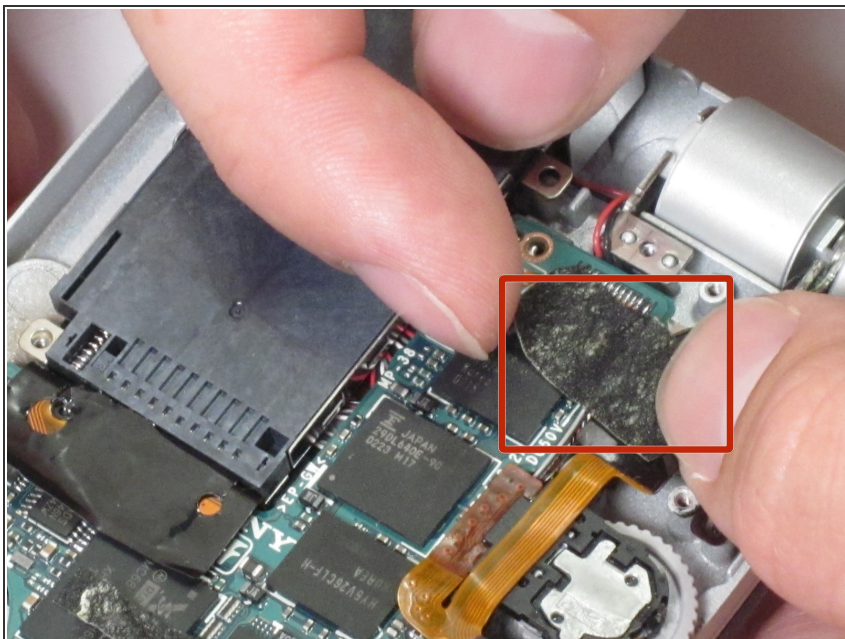

- Remove the tape that is holding the module down.


## Step 6

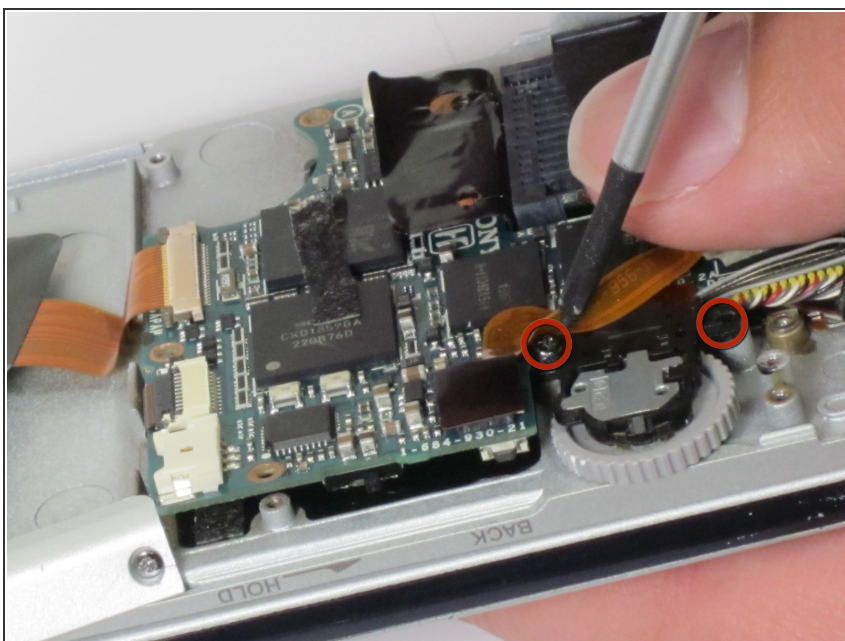

- Lift up the orange ribbon cable and unscrew the two 2.5mm screws located at the corners of the audio module with a Phillips #00 screwdriver.



## Step 7

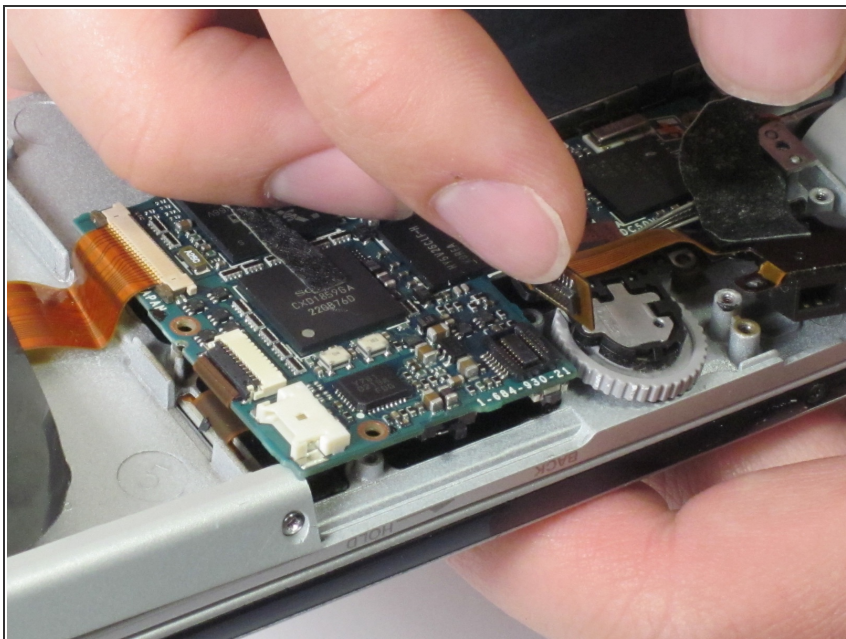

- Unplug the audio module from the motherboard by disconnecting the wires by lifting the orange wire up.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 09:01:15 AM.